




# Dell Inspiron One 2020 Hard Drive Replacement

How to access and replace the hard drive.

Written By: Tyler

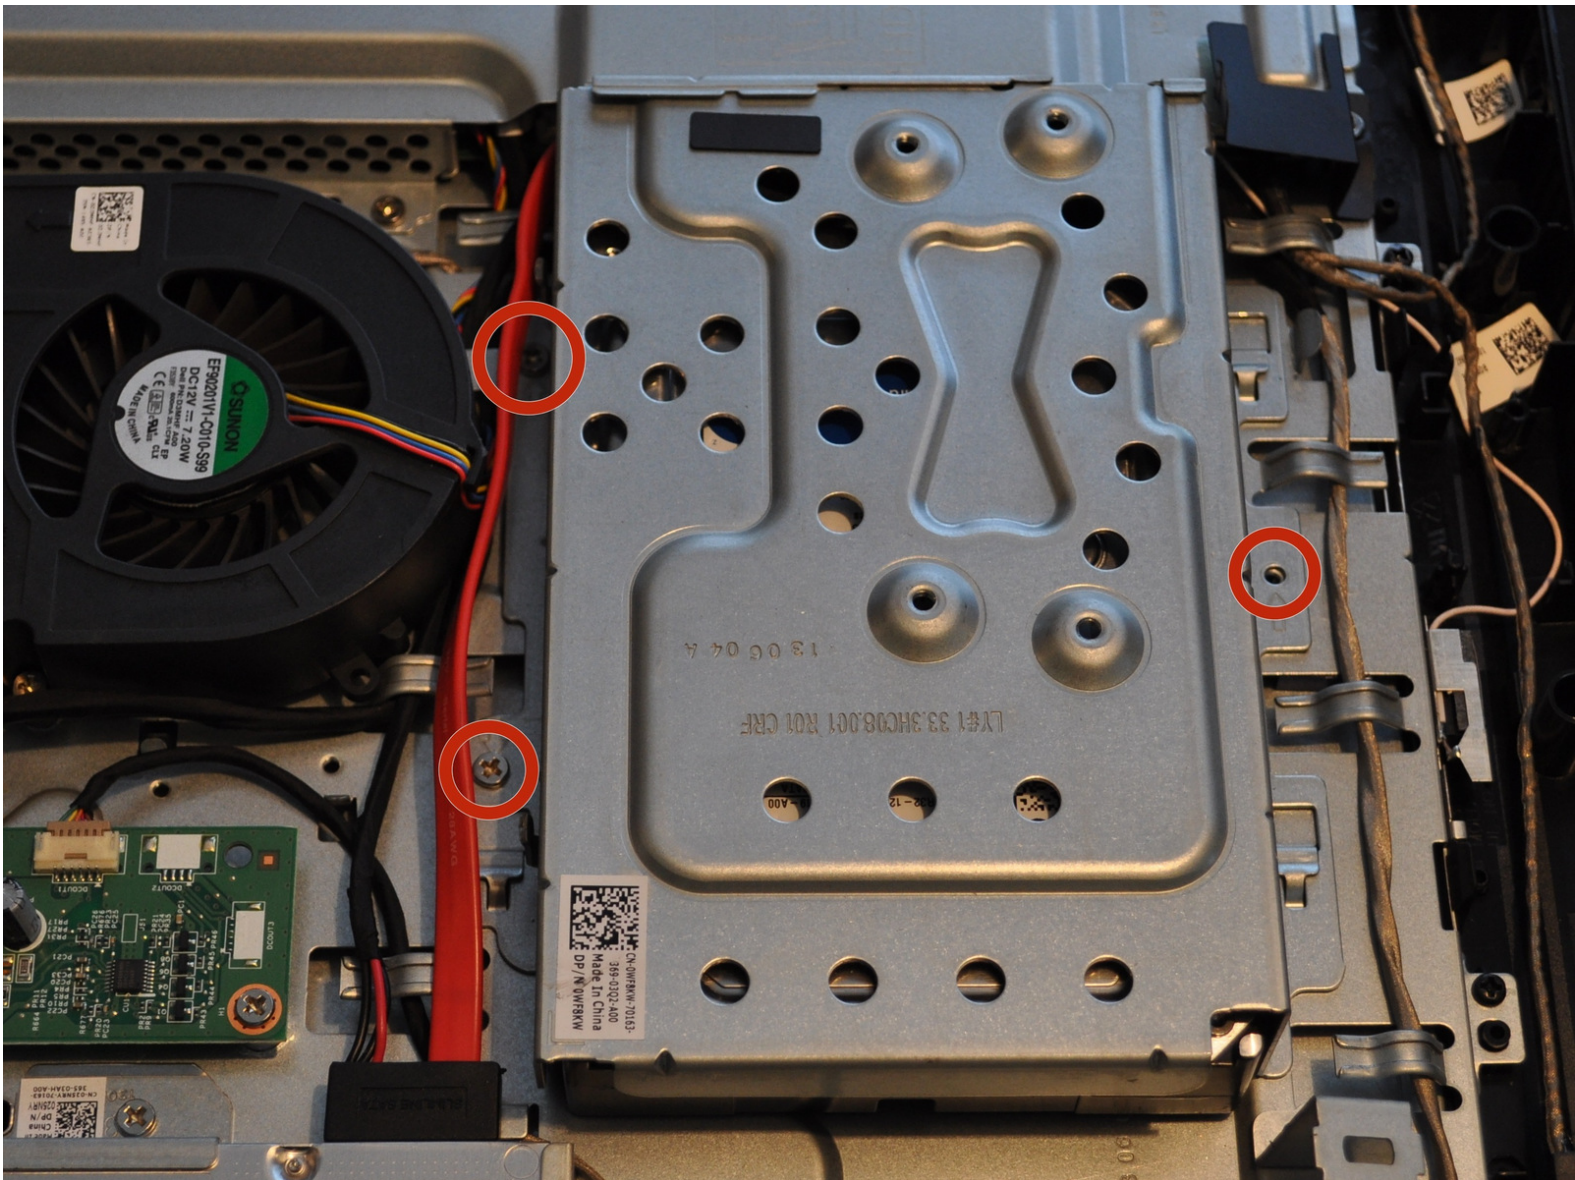




## TOOLS:

- [Phillips #2 Screwdriver](#) (1)
  - [Spudger](#) (1)
-





## Step 1 — Back Cover

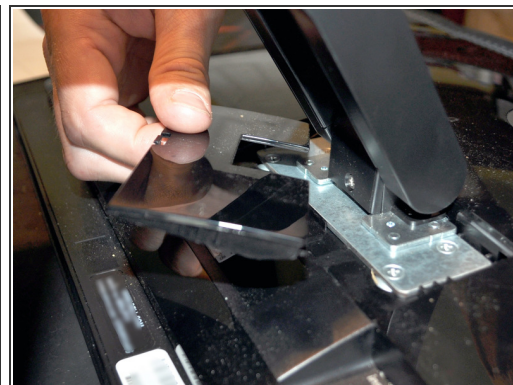

⚠ Place the all in one computer face down on a soft, clean surface to avoid scratching the front.

- Press the tab on the stand cover and lift up.

## Step 2

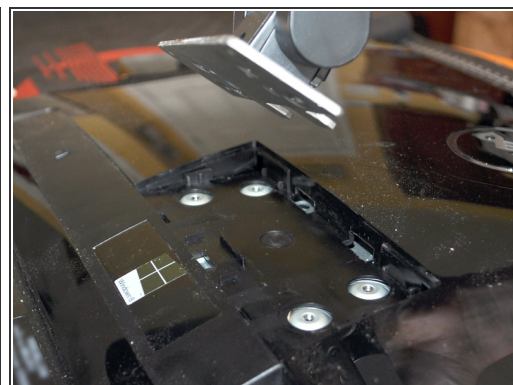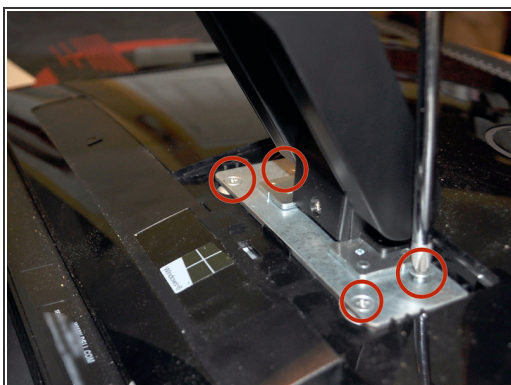

- Remove the four phillips screws that attach the stand to the computer.
- Tilt the stand up and out.


## Step 3



- Starting from the optical drive, pry the back cover up with a plastic spudger.

**i** The cover is held in place by fragile plastic clips. Careful to not break them.



## Step 4 — Hard Drive

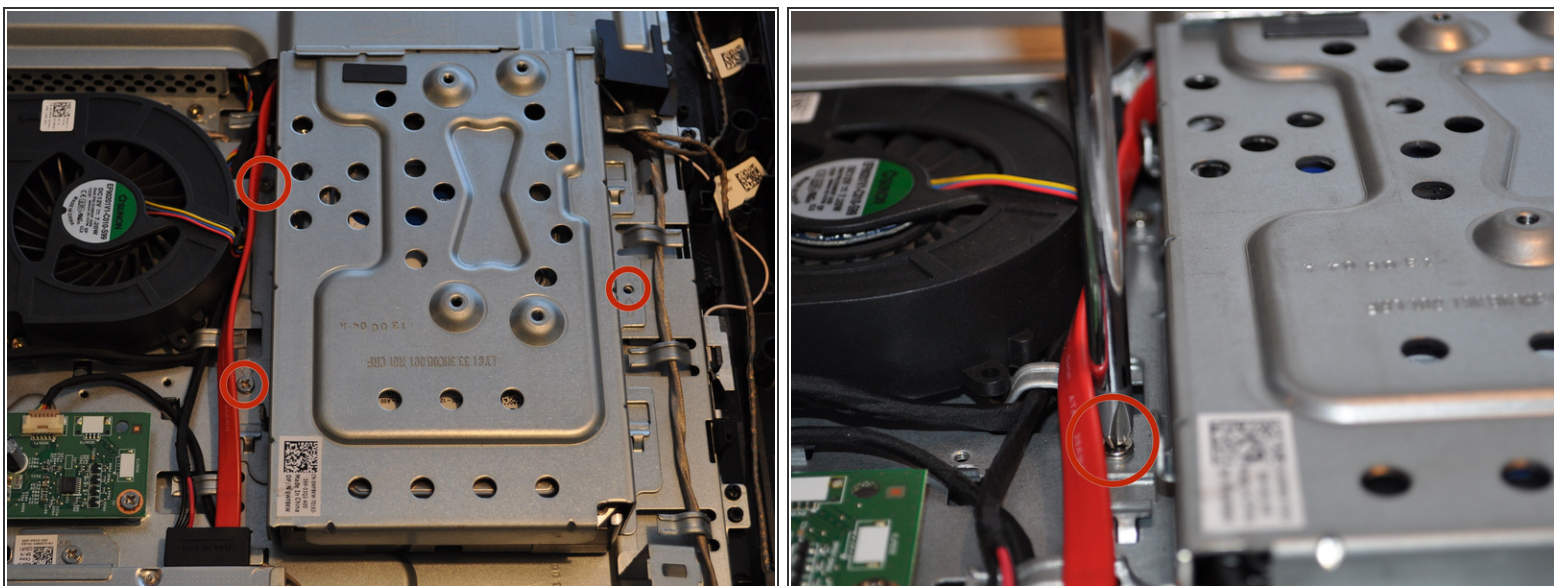

- Remove the three screws that hold the hard drive cage to the chassis.



## Step 5

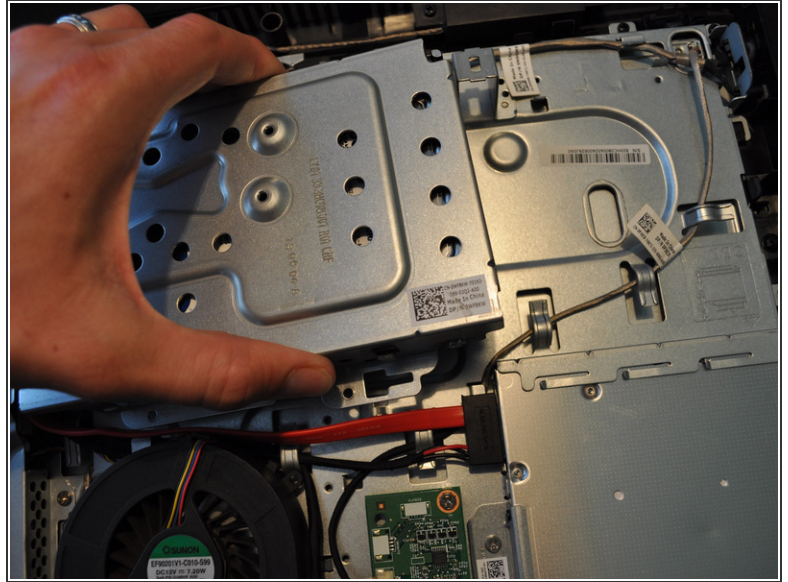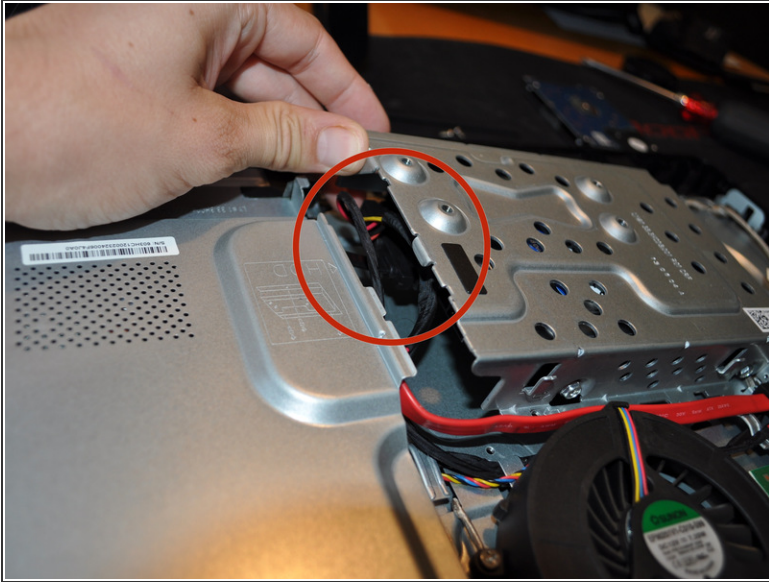



- Slide the hard drive cage out slightly to access and remove the power and SATA cable.

⚠ There isn't much slack in these cables, so don't slide the hard drive cage to far.

i The power and SATA cables are connected together. On most other computers, these connectors are separate.

- Lift the hard drive cage out.

## Step 6

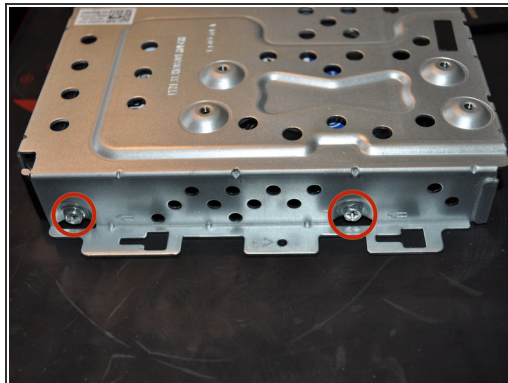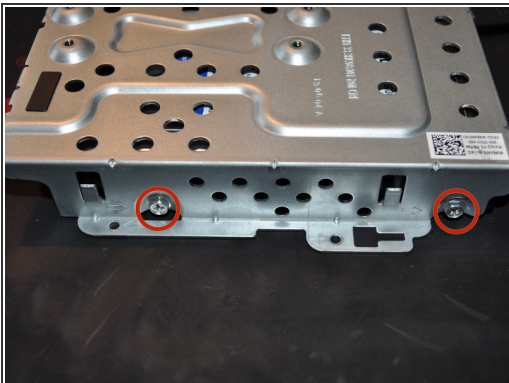

- Remove the four screws (two on each side) that attach the hard drive cage to the hard drive.
- Lift the hard drive cage off the hard drive.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-06 09:08:40 AM.